


- Motor + Encoder + Drive
- Closed Loop System
- No Gain Tuning / No Hunting
- High Resolution / Fast Reponse







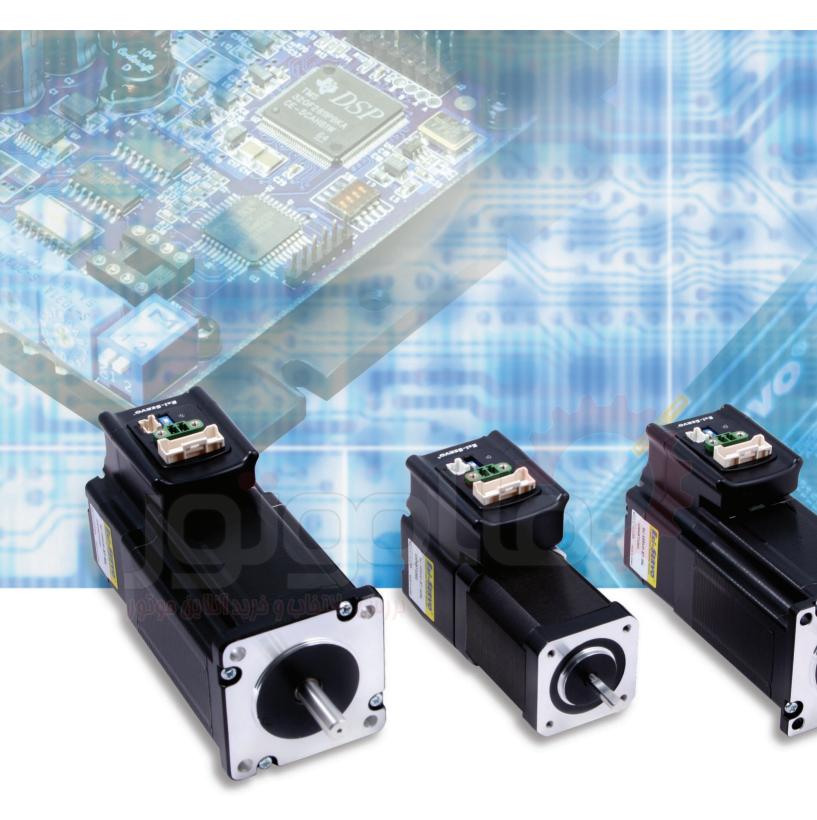







No Gain Tuning

Conventional servo systems, to ensure machine performance, smoothness, positional error and low servo noise, require the adjustment of its servo's gains as an initial crucial step. Even systems that employ auto-tuning require manual tweaking after the system is installed, especially if more that one axis are interdependent Ezi-SERVO[®] employs the best characteristics of stepper and closed loop motion controls and algorithms to eliminate the need of tedious gain tuning required for conventional closed loop servo systems. This means that Ezi-SERVO® is optimized for the application and ready to work right out of the box! The Ezi-SERVO® system employs the unique characteristics of the closed loop stepping motor control, eliminating these cumbersome steps and giving the engineer a high performance servo system without wasting setup time. Ezi-SERVO[®] is especially well suited for low stiffness loads (for example,

a belt and pulley system) that sometime require conventional servo systems to inertia match with the added expense and bulk of a gearbox. Ezi–SERVO[®] also performs exceptionally, even under heavy loads and high speeds!

3 No Hunting

CW

+ pulse

- pulse

CCW

0


Traditional servo motor drives overshoot their position and try to correct by overshooting the opposite direction, especially in high gain applications. This is called null hunt and is especially prevalent in systems that the break away or static friction is significantly higher than the running friction. The cure is lowering the gain, which affects accuracy or using Ezi–SERVO[®] Motion Control System! Ezi–SERVO[®] utilizes the unique characteristics of stepping motors and locks itself into the desired target position, eliminating Null Hunt. This feature is especially useful in applications such as nanotech manufacturing, semiconductor fabrication, vision systems and ink jet printing in which system oscillation and vibration could be a problem.

Time

FASTECH Ezi-SERVO BT

Closed Loop System

Ezi-SERVO[®] is an innovative closed loop stepping motor and controller that utilizes a high-resolution motor mounted encoder to constantly monitor the motor shaft position. The encoder feedback feature allows the Ezi-SERVO[®] to update the current motor shaft position information every 25 micro seconds. This allows the Ezi-SERVO[®] drive to compensate for the loss of position, ensuring accurate positioning. For example, due to a sudden load change, a conventional stepper motor and drive could lose a step creating a positioning error and a great deal of cost to the end user!



Smooth and Accurate


Ezi-SERVO[®] is a high-precision servo drive, using a highresolution encoder with 32,000 pulses/revolution.

Unlike a conventional Microstep drive, the on-board high performance $\ensuremath{\mathsf{DSP}}$

(Digital Signal Processor) performs vector control and filtering, producing a smooth rotational control with minimum ripples.

4

5

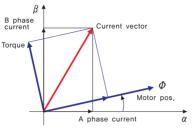

Fast Response

Similar to conventional stepping motors, Ezi–SERVO[®] instantly synchronizes with command pulses providing fast positional response. Ezi–SERVO[®] is the optimum choice when zero–speed stability and rapid motions within a short distance are required. Traditional servo motor systems have a natural delay between the commanding input signals and the resul–tant motion because of the constant monitoring of the current position, necessitating in a waiting time until it settles, called settling time.




6 High Resolution



The unit of the position command can be divided precisely. (Max. 20,000 pulses/revolution)


High Torque

Compared with common step motors and drives, Ezi-SERVO[®] motion control systems can maintain a high torque state over relatively long period of time. This means that Ezi-SERVO continuously operates without loss of position under 100% of the load. Unlike conventional Microstep drives, Ezi-SERVO[®] exploits continuous high-torque operation during high-speed motion due to its innovative optimum current phase control.

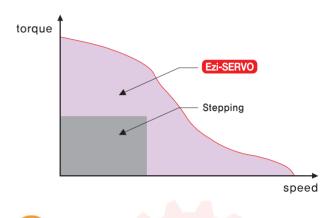

B High Speed

The Ezi–SERVO[®] functions well at high speed without the loss of Synchronism or positioning error. Ezi–SERVO[®]'s ability of continuous monitoring of current position enables the stepping motor to generate high–torque, even under a 100% load condition.

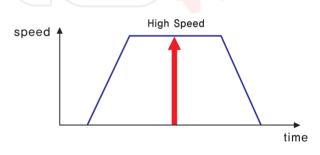

FASTECH Ezi-SERVO BT

• Part Numberin	ng
Ezi-SERVO-E	<u>3T–42S–A</u> –□
Closed Loop	
Stepping System Name	
Motor Flange Size	
42:42mm	
56 : 56mm	
60 : 60mm	
Motor Length	
S : Single	
M : Middle	
L : Large	
XL: Extra Large	
Encoder Resolution	
A + 40 000/D	
A : 10,000/Rev. B : 20,000/Rev.	
D. 20,000/Rev.	
User Code	

• Combination List of Ezi-SERVO-BT

Ezi-SERVO-BT-42S-A Ezi-SERVO-BT-42S-B Ezi-SERVO-BT-42M-A Ezi-SERVO-BT-42M-B Ezi-SERVO-BT-42L-A Ezi-SERVO-BT-42L-A Ezi-SERVO-BT-42XL-A Ezi-SERVO-BT-42XL-A Ezi-SERVO-BT-42XL-B Ezi-SERVO-BT-56S-A Ezi-SERVO-BT-56S-B Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-B Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Unit Part Number
Ezi-SERVO-BT-42M-A Ezi-SERVO-BT-42M-B Ezi-SERVO-BT-42L-A Ezi-SERVO-BT-42L-B Ezi-SERVO-BT-42XL-A Ezi-SERVO-BT-42XL-B Ezi-SERVO-BT-42XL-B Ezi-SERVO-BT-56S-A Ezi-SERVO-BT-56S-B Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-42S-A
Ezi-SERVO-BT-42M-B Ezi-SERVO-BT-42L-A Ezi-SERVO-BT-42L-B Ezi-SERVO-BT-42XL-A Ezi-SERVO-BT-42XL-A Ezi-SERVO-BT-42XL-A Ezi-SERVO-BT-56S-A Ezi-SERVO-BT-56S-B Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-B Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60M-A	Ezi-SERVO-BT-42S-B
Ezi-SERVO-BT-42L-A Ezi-SERVO-BT-42L-B Ezi-SERVO-BT-42XL-A Ezi-SERVO-BT-42XL-B Ezi-SERVO-BT-42XL-B Ezi-SERVO-BT-56S-A Ezi-SERVO-BT-56S-B Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-B Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-A	Ezi-SERVO-BT-42M-A
Ezi-SERVO-BT-42L-BEzi-SERVO-BT-42XL-AEzi-SERVO-BT-42XL-BEzi-SERVO-BT-56S-AEzi-SERVO-BT-56S-BEzi-SERVO-BT-56M-AEzi-SERVO-BT-56M-AEzi-SERVO-BT-56L-AEzi-SERVO-BT-56L-BEzi-SERVO-BT-60S-AEzi-SERVO-BT-60S-BEzi-SERVO-BT-60S-BEzi-SERVO-BT-60S-BEzi-SERVO-BT-60S-BEzi-SERVO-BT-60S-BEzi-SERVO-BT-60S-BEzi-SERVO-BT-60S-BEzi-SERVO-BT-60M-AEzi-SERVO-BT-60M-AEzi-SERVO-BT-60M-BEzi-SERVO-BT-60L-A	Ezi-SERVO-BT-42M-B
Ezi-SERVO-BT-42XL-A Ezi-SERVO-BT-42XL-B Ezi-SERVO-BT-56S-A Ezi-SERVO-BT-56S-B Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-B Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A	Ezi-SERVO-BT-42L-A
Ezi-SERVO-BT-42XL-B Ezi-SERVO-BT-56S-A Ezi-SERVO-BT-56S-B Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-B Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A	Ezi-SERVO-BT-42L-B
Ezi-SERVO-BT-56S-A Ezi-SERVO-BT-56S-B Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-B Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-42XL-A
Ezi-SERVO-BT-56S-B Ezi-SERVO-BT-56M-A Ezi-SERVO-BT-56M-B Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60M-A	Ezi-SERVO-BT-42XL-B
Ezi-SERVO-BT-56M-AEzi-SERVO-BT-56M-BEzi-SERVO-BT-56L-AEzi-SERVO-BT-56L-BEzi-SERVO-BT-60S-AEzi-SERVO-BT-60S-BEzi-SERVO-BT-60M-AEzi-SERVO-BT-60M-BEzi-SERVO-BT-60L-A	Ezi-SERVO-BT-56S-A
Ezi-SERVO-BT-56M-B Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-56S-B
Ezi-SERVO-BT-56L-A Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60M-B	Ezi-SERVO-BT-56M-A
Ezi-SERVO-BT-56L-B Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-56M-B
Ezi-SERVO-BT-60S-A Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-56L-A
Ezi-SERVO-BT-60S-B Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-56L-B
Ezi-SERVO-BT-60M-A Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-60S-A
Ezi-SERVO-BT-60M-B Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-60S-B
Ezi-SERVO-BT-60L-A	Ezi-SERVO-BT-60M-A
	Ezi-SERVO-BT <mark>-60M-B</mark>
	Ezi-SERVO-BT-60L-A
Ezi-SERVO-BT-60L-B	Ezi-SERV <mark>O-BT-60L</mark> -B

• Advantages over Open-loop Control Stepping Drive

- 1. Reliable positioning without loss of synchronism.
- 2. Holding stable position and automatically recovering to the original position even after experiencing positioning error due to external forces, such as mechanical vibration or vertical positional holding.
- 3. Ezi-SERVO[®] utilizes100% of the full range of rated motor torque, contrary to a conventional open-loop stepping driver that can use up to 50% of the rated motor torque due to the loss of synchronism.
- 4. Capability to operate at high speed due to load-dependant current control, open-loop stepper drivers use a constant current control at all speed ranges without considering load variations.

Advantages over Servo Motor Controller

- 1. No gain tuning (Automatic adjustment of gain in response to a load change.)
- 2. Maintains the stable holding position without oscillation after completing positioning.
- 3. Fast positioning due to the independent control by on-board DSP.
- 4. Continuous operation during rapid short-stroke movement due to instantaneous positioning.

• Specifications

Input Voltage 24VDC ±10%		24VDC ±10%
Co	ontrol Method	Closed loop control with 32bit DSP
Curre	ent Consumption	Max 500mA (Except motor current)
bu	Ambient Temperature	In Use : 0~55°C In Storage : -20~70°C
Operating Condition	Humidity	In Use: 35~85% In Storage: 10~90%
	Vib. Resist.	0.5G
	Rotation Speed	0~3000rpm
	Resolution(P/R)	10000/Rev. Encoder model : 500, 1000, 1600, 2000, 3600, 5000, 6400, 7200, 10000 20000/Rev. Encoder model : 500, 1000, 1600, 2000, 3600, 5000, 6400, 7200, 10000, 20000 (Selectable with Rotary switch)
	Max, Input Pulse Frequency	500KHz (Duty 50%)
Function	Protection Functions	Over current, Over speed, Position tracking error, Over load, Over temperature, Over regenerated voltage, Motor connect error, Encoder connect error, Motor voltage error, Inposition error, System error, ROM error, Position overflow error
	In-Position Selection	0~F(Selectable with Rotary switch)
	Position Gain Selection	0~F(Selectable with Rotary switch)
	Pulse Input Method	1-Pulse / 2-Pulse (Selectable with DIP switch)
	Speed/Position Control Command	Pulse train input
Signals	Input Signals	Position command pulse, Servo On/Off, Alarm reset (Photocoupler input)
I/O Sign	Output Signals	In-Position, Alarm (Photocoupler output) Encoder signal(A+, A-, B+, B-, Z+, Z-, 26C31 of Equivalent), (Line Driver output)


بررسی ، انتفاب و فرید آنااین موتور


Motor Specifications



MODE	L	UNIT	Ezi-SERVO-BT 42S Series	Ezi-SERVO-BT 42M Series	Ezi-SERVO-BT 42L Series	Ezi-SERVO-BT 42XL Series
DRIVE METHOD			BI-POLAR	BI-POLAR	BI-POLAR	BI-POLAR
NUMBER OF PHASE	S		2	2	2	2
VOLTAGE		VDC	3.36	4.32	4.56	7.2
CURRENT per PHAS	ε	А	1.2	1.2	1.2	1.2
RESISTANCE per PH	IASE	Ohm	2.8	3.6	3.8	6
INDUCTANCE per PH	HASE	mH	2.5	7.2	8	15.6
HOLDING TORQUE	HOLDING TORQUE		0.32	0.44	0.54	0.8
ROTOR INERTIA	ROTOR INERTIA		35	54	77	114
WEIGHTS	WEIGHTS		220	280	350	500
LENGTH (L)		mm	33	39	47	59
ALLOWABLE	3mm		22	22	22	22
OVERHUNG LOAD	8mm	N	26	26	26	26
(DISTANCE FROM	13mm	IN IN	33	33	33	33
END OF SHAFT)	18mm		46	46	46	46
ALLOWABLE THRUST LOAD N		Lower than motor weight				
INSULATION RESISTA	INSULATION RESISTANCE MOhm		100min. (at 500VDC)			
INSULATION CLASS			CLASS B (130°C)			
OPERATING TEMPERA	ATURE	Ĵ	0 to 55			

• Motor Dimension [mm] and Torque Characteristics

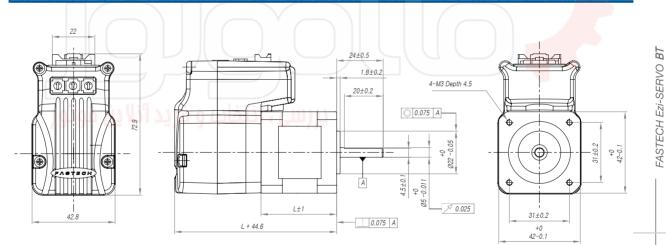

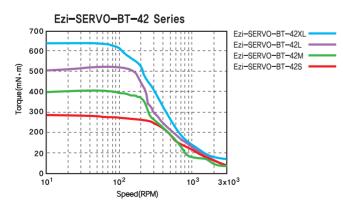

*Measured Condition

Motor Voltage = 24VDC Motor Current = Rated Current (Refer to Motor Specification) Drive = Ezi-SERVO-BT


6

• Motor Specifications



MODE	L	UNIT	Ezi-SERVO-BT 56S Series	Ezi-SERVO-BT 56M Series	Ezi-SERVO-BT 56L Series
DRIVE METHOD			BI-POLAR	BI–POLAR	BI-POLAR
NUMBER OF PHASE	S		2	2	2
VOLTAGE		VDC	1.56	2.1	2.7
CURRENT per PHAS	SE .	А	3	3	3
RESISTANCE per PH	IASE	Ohm	0.52	0.7	0.9
INDUCTANCE per PH	HASE	mH	1	2	3.8
HOLDING TORQUE	HOLDING TORQUE N · m		0.64	1	1.5
ROTOR INERTIA	ROTOR INERTIA g·cm²		120	200	480
WEIGHTS	WEIGHTS g		500	700	1150
LENGTH (L)	LENGTH (L) n		46	54	80
ALLOWABLE	3mm		52	52	52
OVERHUNG LOAD	8mm	N	65	65	65
(DISTANCE FROM	13mm	IN	85	85	85
END OF SHAFT)	18mm		123	123	123
ALLOWABLE THRUST	LOAD	Ν	Lower than motor weight		
INSULATION RESISTA	ANCE	MOhm	nm 100min. (at 500VDC)		_
INSULATION CLASS				CLASS B (130°C)	
OPERATING TEMPER	ATURE	°C	0 to 55		

Motor Dimension [mm] and Torque Characteristics

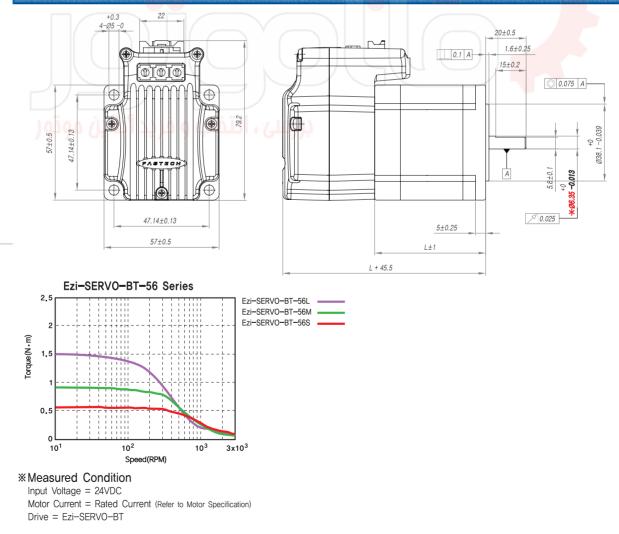

* : There are 2 kinds size of front shaft diameter for Ezi-SERVO-BT-56 series as Φ 6,35 and Φ 8,0,

Motor Specifications




MODE	L	UNIT	Ezi-SERVO-BT 60S Series	Ezi-SERVO-BT 60M Series	Ezi-SERVO-BT 60L Series
DRIVE METHOD			BI–POLAR	BI–POLAR	BI–POLAR
NUMBER OF PHASE	S		2	2	2
VOLTAGE		VDC	1.52	1.56	2.6
CURRENT per PHAS	ЭЕ	A	4	4	4
RESISTANCE per PH	IASE	Ohm	0.38	0.39	0.65
INDUCTANCE per PH	HASE	mH	064	1.2	2.4
HOLDING TORQUE	HOLDING TORQUE		0.88	1.28	2.4
ROTOR INERTIA	ROTOR INERTIA g·cm ²		140	320	800
WEIGHTS g		g	600	900	1600
LENGTH (L)		mm	46	56	90
ALLOWABLE	3mm		70	70	70
OVERHUNG LOAD	8mm	N	87	87	87
(DISTANCE FROM	13mm	IN	114	114	114
END OF SHAFT)	18mm		165	165	165
ALLOWABLE THRUST	LOAD	N	Lower than motor weight		
INSULATION RESISTA	ANCE	MOhm	100min. (at 500VDC)		
INSULATION CLASS				CLASS B (130°C)	
OPERATING TEMPERA	ATURE	C	0 to 55		

• Motor Dimension [mm] and Torque Characteristics

3x10³

10³

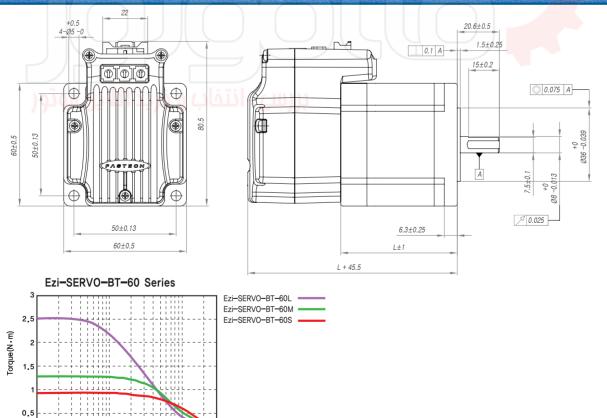

FASTECH Ezi-SERVO BT

*Measured Condition

0


10¹

Input Voltage = 24VDC Motor Current = Rated Current (Refer to Motor Specification) Drive = Ezi-SERVO-BT

10²

Speed(RPM)

Setting and Operating

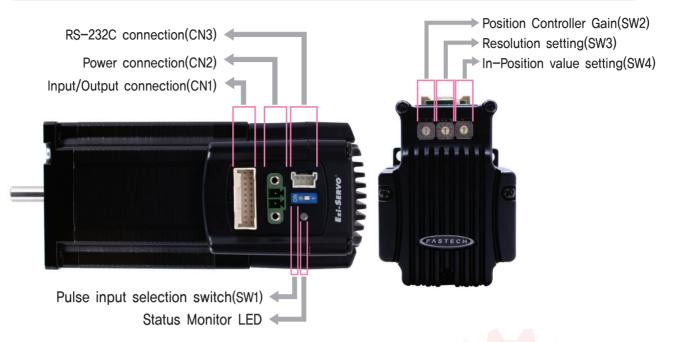

Protection function and 7–Segment flash times

When Alarm occurs, can recognize main reason of alarming thru by 7-Segment flash times which indicates Network ID.

Times	Protection	Conditions	
1	Over current	The current through power devices in inverter exceeds the limit value	
2	Over speed	Motor speed exceed 3000rpm	
3	Position tracking error	Position error value is higher than 90° in motor run state	
4	Over load	The motor is continuously operated more than 5 second under a load exceeding the max, torque	
5	Over temperature	Inside temperature of drive exceeds 55°C	0,5s 2,0s
6	Over regeneratived voltage	Back-EMF more than 50V	
79	Motor connect error	The power is ON without connection of the motor cable to drive	Alarm LED flash
8	Encoder connect error	Cable connection error with Encoder connector in drive	(ex : Position tracking error)
9	Motor voltage error	Motor voltage is less than 20V	
10	Inposition error	After operation is finished, a position error occurs	
11	System error	Error occurs in drive system	
12	ROM error	Error occurs in parameter storage device(ROM)	
15	Position overflow error	Position error value is higher than 90° in motor stop state	

1. Pulse input and motor direction selection switch(SW1)

Indication	Switch Name	Functions
2P/1P	Selecting pulse	Selectable 1-Pulse input mode or 2-Pulse input mode as Pulse input signal.
	input mode	ON : 1-Pulse mode OFF : 2-Pulse mode * Default : 2-Pulse mode

2. Resolution selection switch(SW3)

The Number of pulse per revolution.

Position	Pulse/Rotation	Position	Pulse/Rotation
0	500* ¹	5	3600
1	500	6	5000
2	1000	7	6400
3	1600	8	7200
4	2000	9	10000* <mark>2</mark>



*1 : Resolution value depend on encoder type,

*2 : Default = 10,000

3. Position Controller Gain Selection switch(SW2) 7. Input/Output signal(CN1)

The Position Controller Gain Switch allows for the correction of the motor position deviation after stopping caused by load and friction. Depending on the motor load, the user may have to select a different gain position to stabilize and to correct positional error quickly.

To tune the controller

- 1. Set the switch to "0" position.
- 2. Start to rotate the switch until system becomes stable.
- 3. Rotate the switch $+/-1\sim^2$ position to reach better performance.

Position	Time Constant of the Integral part	Proportional Gain*1
0	1	1
1	1	2
2	1	3
*23	1	4
4	1	5
5	1	6
6	2	1
7	2	2
8	2	3
9	2	4
А	2	5
В	3	1
С	3	2
D	3	3
E	3	4
F	3	5

*1: Value in the columns are in relative units. They only show the parameter changes depending on the switch's position. *2 : Default = 3



4. In-Position Value Setting switch(SW4)

To select the output condition of In-position signal. In-position output signal is generated when the pulse number of positional error is lower than selected In-position value set by this switch after positioning command is executed.

Position	In-Position Value[Pulse] Fast Response	Position	In-Position Value[Pulse] Accurate Response
*10	0	8	0
1	1	9	1
2	2	А	2
3	3	В	3
4	4	С	4
5	5	D	5
6	6	E	6
7	7	F	7

*1 : Default = 0

*Please refer to User Manual for setup,



5. Power Connector(CN2)

NO.	Function	
1	24VDC ±10%	
2	GND	


6. RS-232C Communication(CN3)

Communication Port to set parameter by computer. BaudRate is 115200bps. To set parameter, please use included GUI program.


NO.	Function	
1	Rx	
2	Tx	
3	GND	1



NO.	Function	I/O	
1	CW+(Pulse+)	Input	
2	CW-(Pulse-)	Input	
3	CCW+(Dir+)	Input	
4	CCW–(Dir–)	Input	
5	A+	Output	
6	A-	Output	
7	B+	Output	
8	B-	Output	
9	Z+	Output	
10	Z-	Output	
11	Alarm	Output	
12	In–Position	Output	
13	Servo On/Off	Input	
14	Alarm Reset	Input	
15	NC		
16	BRAKE+	Output	
17	BRAKE-	Output	
18	Signal–GND	Output	
19	24VDC GND	Input	
20	24VDC	Input	
	20	2	



GUI(Graphic User Interface

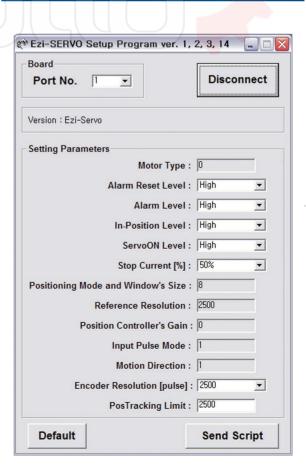

B FASTECH Ezi-SERVO

10

• System Configuration



1. Cable Option

①Signal Cable

Available to connect between Control System and Ezi-SERVO-BT.

ltem	Length[m]	Remark
CSVB-S-DDDF		Normal Cable
CSVB-S-DDDM		Robot Cable

 \Box is for Cable Length. The unit is 1m and Max. 20m length.

2 Power Cable

Available to connect between Power and Ezi-SERVO-BT.

Item	Length[m]	Remark
CSVA-P-DDDF		Normal Cable
CSVA-P-DDDM		Robot Cable

□ is for Cable Length. The unit is 1m and Max. 20m length.

③RS-232C Cable

Cable to connect Ezi-SERVO-BT series and computer. Please use this cable to change parameter as like resolution of Drive and Stop current.

Item	Length[m]	Remark
CBTB-C-DDDF		Normal Cable

 \Box is for Cable Length. The unit is 1m and Max. 15m length.

FASTECH Ezi-SERVO **B**T

2. Option

@FAS-UCR(USB to RS-232C Converter)		
Item	Specification	
Comm. Speed	115.2Kbps default	
Comm. Dis-	USB: Max. 5m	
tance	RS-232C: Max. 15m	
Connector Type	USB: USB Standard	
	RS-232C: DB9 Femail	
IP Address	Automatic Setting	
IRQ Number	Automatic Setting	
Operating	Windows 98/2000/XP/Vista	
System		
Dimension	50X69X23mm	
Weight	31g	
Dowor	USB self power	
Power	(No need External power)	


Item	Length[m]	Remark
CGNR-U-002F	2	
CGNR-U-003F	3	Normal Cable
CGNR-U-005F	5	

3. Connector for Cabling

ITEM	Λ	Specification	Maker
Power Connector (CN2)	Terminal Block	AKZ1550/2F-3.81	PTR
Signal Connector (CN1)	Housing	501646-2000	MOLEX
	Terminal	501648-1000(AWG 26~28)	MOLEX
RS-232C Connetor (CN3)	Housing	33507-0300	MOLEX
	Terminal	50212-8100	MOLEX

**These connectors are serviced together with Ezi-SERVO-BT except when purchasing option cables. **Above connector is the most suitable product for Ezi-SERVO-BT. Another equivalent connector can be used.

• External Wiring Diagram

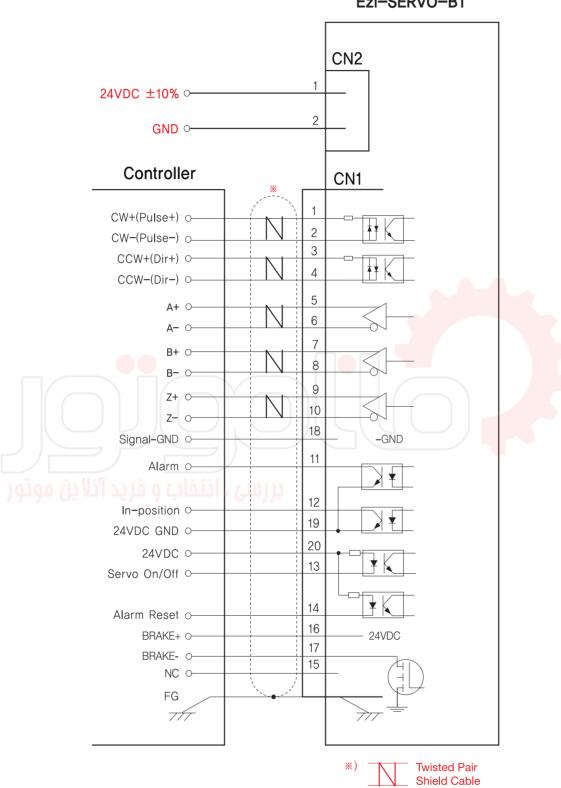


Ezi-SERVO-BT

Control Signal input/output Description



Input signal

Input signals of the drive are all photocoupler protected. The signal shows the status of internal photocouplers [ON: conduction], [OFF: Non-conduction], not displaying the voltage levels of the signal.

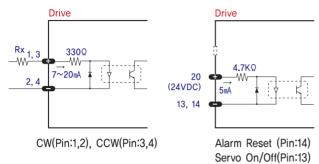

CW, CCW Input

This signal can be used to receive a positioning pulse command from a user host motion controller. The user can select 1-pulse input mode or 2-pulse input mode (refer to switch No.1, SW1).

The input schematic of CW, CCW is designed for 5V TTL level. When using 5V level as an input signal, the resistor Rx is not used and connect to the driver directly.

When the level of input signal is more than 5V, Rx resistor is required. If the resistor is absent, the drive will be damaged!


If the input signal level is 12V, Rx value is 2.2Kohm and 24V, Rx value is 4.7Kohm.

Servo On/Off Input

This input can be used only to adjust the position by manually moving the motor shaft from the load-side. By setting the signal [ON], the driver cuts off the power supply to the motor. Then, one can manually adjust output position. When setting the signal back to [OFF], the driver resumes the power to the motor and recovers the holding torque. When driving a motor, one needs to set the signal [OFF].

Alarm Reset Input

When a protection mode has been activated, a signal to this alarm reset input cancels the Alarm output.




By setting the alarm reset input signal [ON], cancel the Alarm output, Before cancel the Alarm output, have to remove the source of alarm.

Output signals

2

Output signals from the driver are photocoupler protected: Alarm, In-Position and the Line Driver Outputs (encoder signal). In the case of photocoupler outputs, the signal indicates the status of internal photocouplers [ON: conduction], [OFF: Non-conduction], not displaying the voltage levels of the signal.

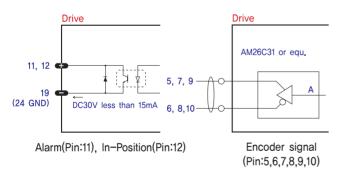


Alarm Output

The Alarm output indicates [ON] when the driver is in a normal operation. If a protection mode has been activated, it goes [OFF]. A host controller needs to detect this signal and stop sending a motor driving command. When the driver detects an abnormal operation such as overload or over current of the motor, it sets the Alarm output to [OFF], flashes the Alarm LED, disconnect the power to a motor and stops the motor simultaneously.

[Caution] Only at the Alarm output port, the photocoupler isolation is in reverse. When the driver is in normal operation the Alarm output is [ON]. On the contrary when the driver is in abnormal operation that start protection mode, the Alarm output is [OFF].

In-Position Output

In-Position signal is [ON] when positioning is completed. This signal is [ON] when the motor position error is within the value set by the switch SW4,



Encoder signal Output

The encoder signal is a line driver output. This can be used to confirm the stop position.



FASTECH Co., Ltd.

Rm #1202, Bucheon Technopark 401 Dong, Yakdae-dong, Wonmi-Gu, Bucheon-si, Gyeonggi-do, Rep. Of Korea(Zip:420-734) TEL : 82-32-234-6300, 6301 FAX : 82-32-234-6302 Email : fastech@fastech.co.kr Homepage : www.fastech.co.kr

FASTECH USA

2585 Mariners Way SE Southport, NC 28461 USA TEL : 910,795,2380 Email : fastech@fastech.co.kr Homepage : www.fastech-us.com